



spare parts list Starvac M55 230V EU




Table of contents

1 Starvac M55 230V EU (05/2010 bis 12/2018)	3
1 Starvac M55 Hood	4
2 Starvac M55 Turbine	6
3 Starvac M55 Filter vibrator	8
4 Starvac M55 Container	10
5 Starvac M55 Outlet hose	12
6 Starvac M55 Accessories	14
1 Starvac M55 230V EU (01 / 2019 bis heute)	16
1 Starvac M55 Hood	17
2 Starvac M55 Turbine 1	19
3 Starvac M55 Turbine 2	21
4 Housing Suction turbine	23
5 Starvac M55 Filter vibrator	25
6 Starvac M55 Valve	27
7 Starvac M55 Container	29
8 Starvac M55 Outlet hose	31
9 Starvac M55 Accessories	33
10 ABS Hose coupling	35
1 Floor Noozel Alu	37

1 Starvac M55 230V EU (05/2010 bis 12/2018)

Item no.	Article no.	Description
1	01_01_060800	Starvac M55 Hood
2	01_02_060800	Starvac M55 Turbine
3	01_03_060800	Starvac M55 Filter vibrator
4	01_04_060800	Starvac M55 Container
5	01_05_060800	Starvac M55 Outlet hose
6	01_06_060800	Starvac M55 Accessories


1 Starvac M55 Hood

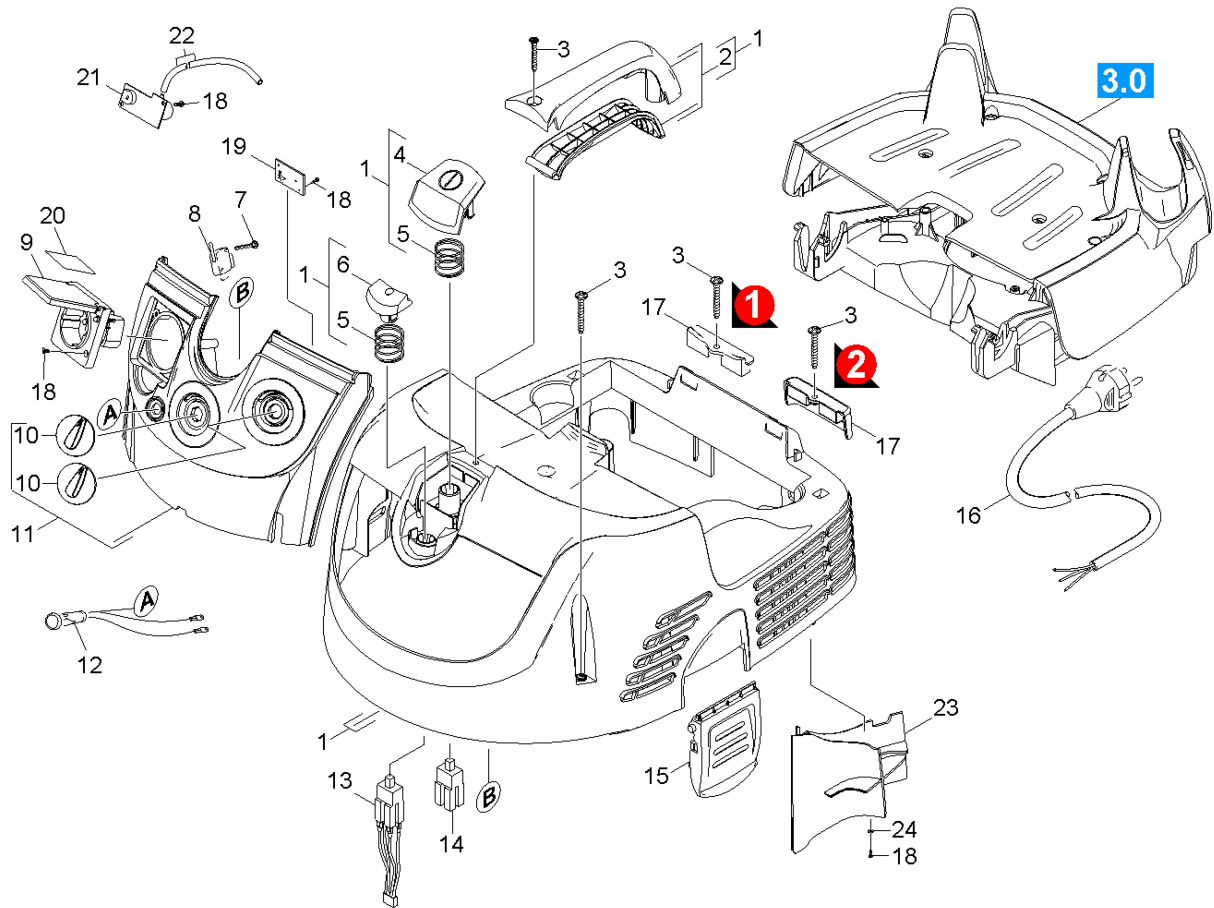

1 Starvac M55 Hood

Item no.	Article no.	Description	Quantity
2	060920	Handle cpl. Starvac+PallmannDust	1
3	060952	Screw 5x30 Starvac/Dust	5
3.0	070566	Hood complet Starvac M55	1
4	064166	Switch on/off calipers Starvac / Dust	1
5	070568	Spring push button Starvac	2
6	069799	Push button f. LED Starvac / Dust	1
7	060955	Screw 4x16 Starvac+PallmannDust	1
8	065773	Micro switch Starvac M55	1
9	072764	Installation socket Europa Starvac	1
9	062053	Installation socket CH Starvac	1
9	062052	Installation socket UK Starvac	1
10	073418	Knob Starvac+Dust	2
11		Instrument Panel Starvac M55	1
12	077224	Signal lamp green Starvac	1
13	064881	Switch with LED Starvac/Dust	1
14	064350	Electrical push button On/Off Starvac	1
15	060925	Closing flap Starvac/Dust	2
16	067390	Cord 3G1,5x10m green with plug	1
17	061016	Cover holding device Starvac M55	1
18	169413	Screw Starvac 3x12 10.9	7
19	077006	Circuit board Starvac	1
20	169414	Label cutting Starvac	1
21	085485	Circuit board hose selector switch	1
22	165146	Hose Ø 3 x 1.35 Starvac M55	1
23		Moulded part Blow-out ribs M55	1
24		Washer	1



2 Starvac M55 Turbine

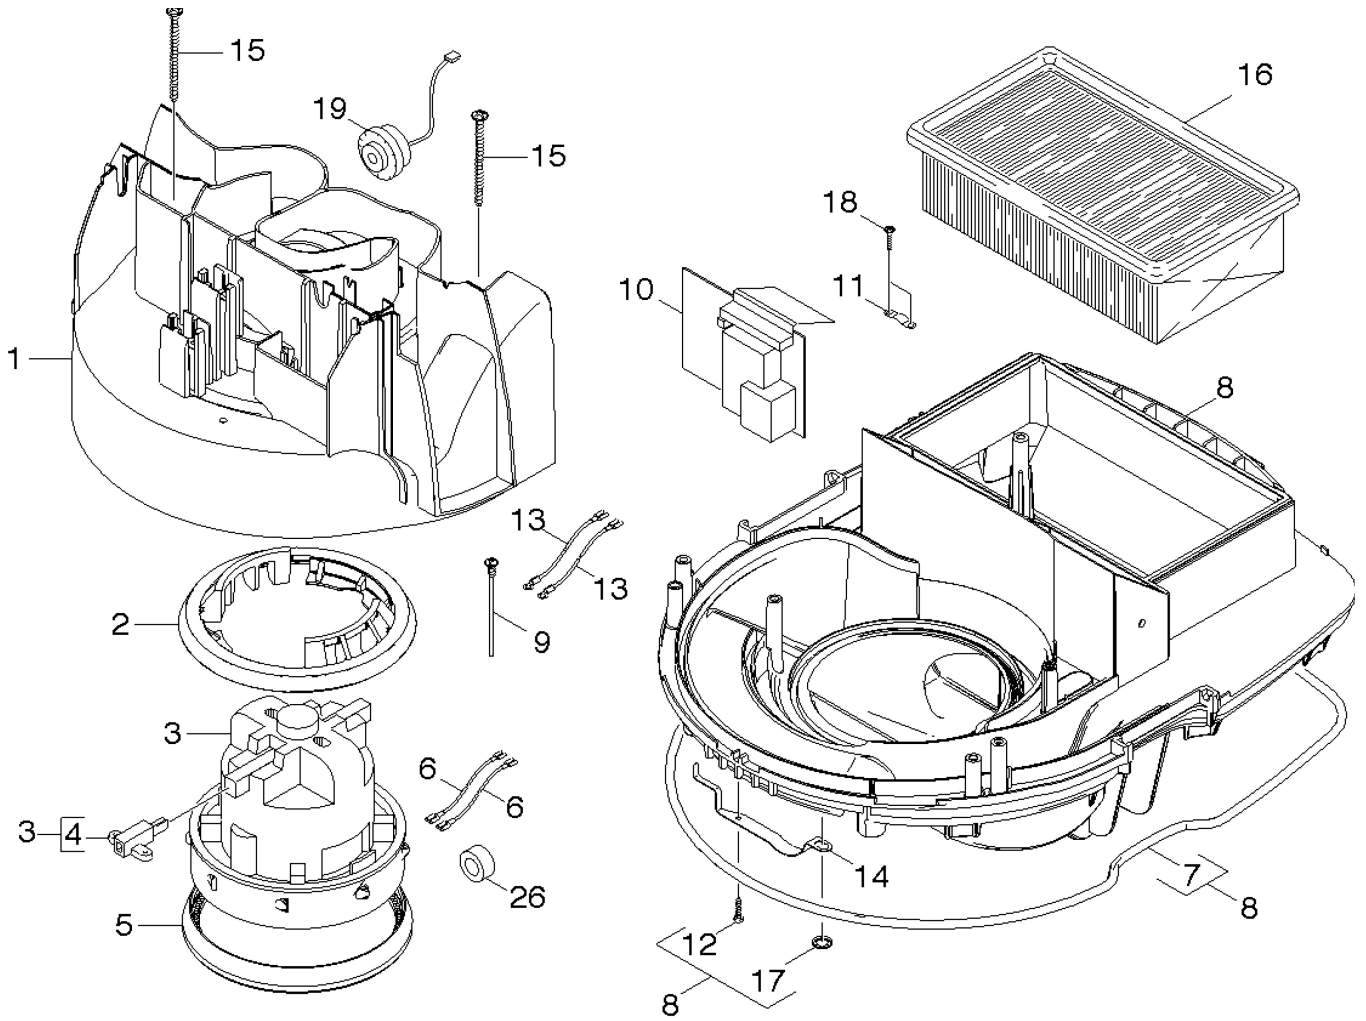

2 Starvac M55 Turbine

Item no.	Article no.	Description	Quantity
1	084471	Turbine housing Starvac M55	1
2	067335	Seal above suction turbine 230V Starvac	1
3	066488	suction turbine 230V Starvac up to 4/19	1
4	067331	Set carbon brushes Starvac/Dust	1
5	067334	Seal below suction turbine 230V Starvac	1
6		Cable Turbine Starvac M55	2
7	081836	Seal rubber turbine Starvac/Dust	1
8	082634	Housing complete Starvac	1
9		Sensor	2
10	072974	Turbine circuit board 230V Starvac 4/19	1
11		Gripper clamb	1
12		Bolt	1
13		Cable for Sensor light blue	2
14		Spring electrically conductive	1
15	060952	Screw 5x30 Starvac/Dust	2
16	060949	Flat-filter Starvac/Dust	1
17		Mounting	1
18		Bolt	2
19		Acoustic filter warning	1
26	088627	Ferrit ring M30 / M55	1


3 Starvac M55 Filter vibrator

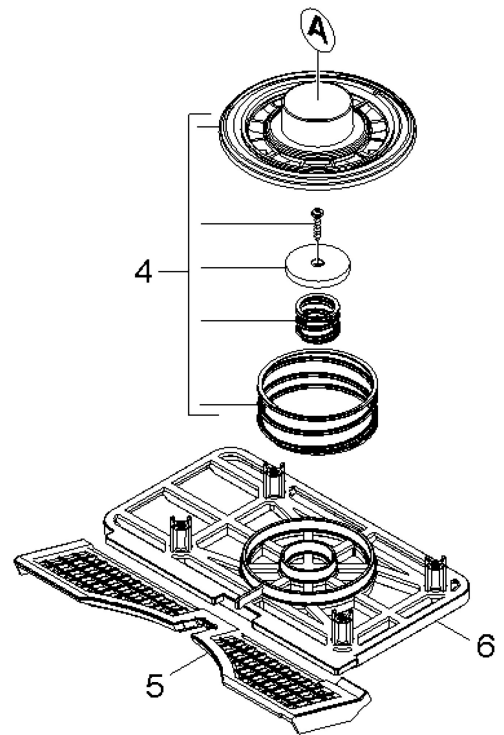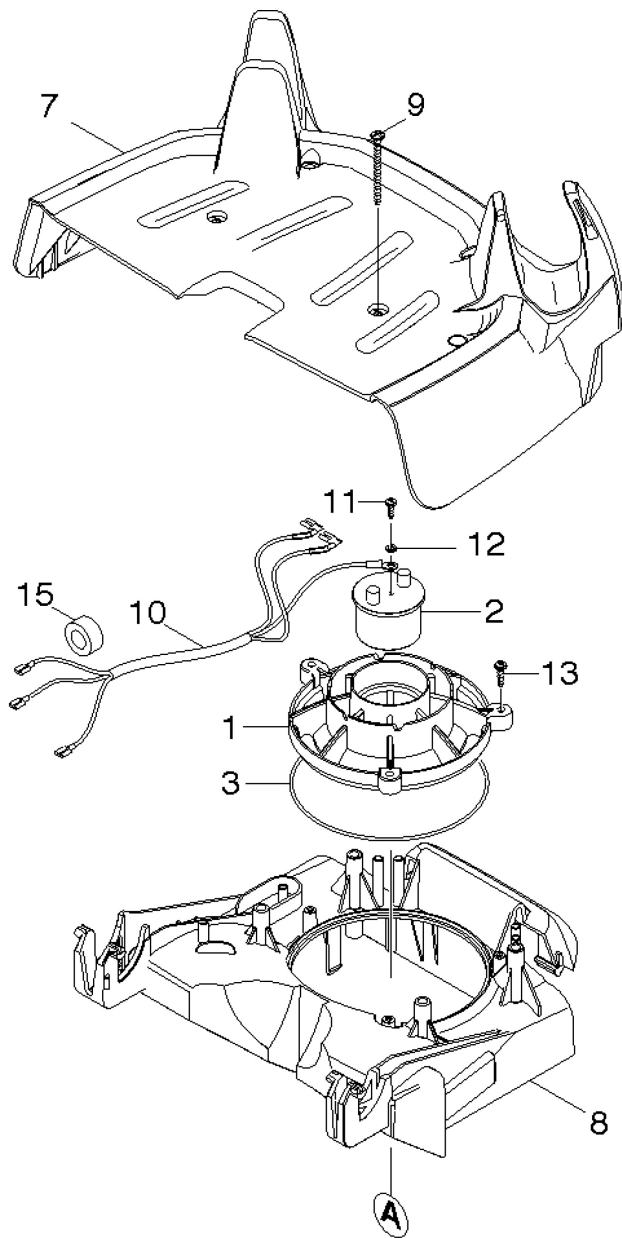

3 Starvac M55 Filter vibrator

Item no.	Article no.	Description	Quantity
1	080760	Holding device Magnet Starvac M 55	1
2	074336	Magnet 230V Starvac	1
3	077108	O-Ring 115,0x1,78-NBR 70 Starvac	1
4	077109	Replacement Set valve cpl. Starvac	1
5	073270	Sealing Supply air Starvac	1
6	081978	Holder spring Starvac M55	1
7	065849	Cover filter cover Starvac/Dust	1
8	082144	Cover Filter Starvac M55	1
9	069534	Screw 5x80 Starvac/Dust	4
10	088623	Cable for magnet 230V Starvac M55	1
11	060975	Screw M 4x 8-A2 Starvac/Dust	1
12	088625	Serrated lock washer A4 Starvac M55	1
13	060953	Screw 4x12 Starvac/Dust	3
15	088627	Ferrit ring M30 / M55	1


4 Starvac M55 Container

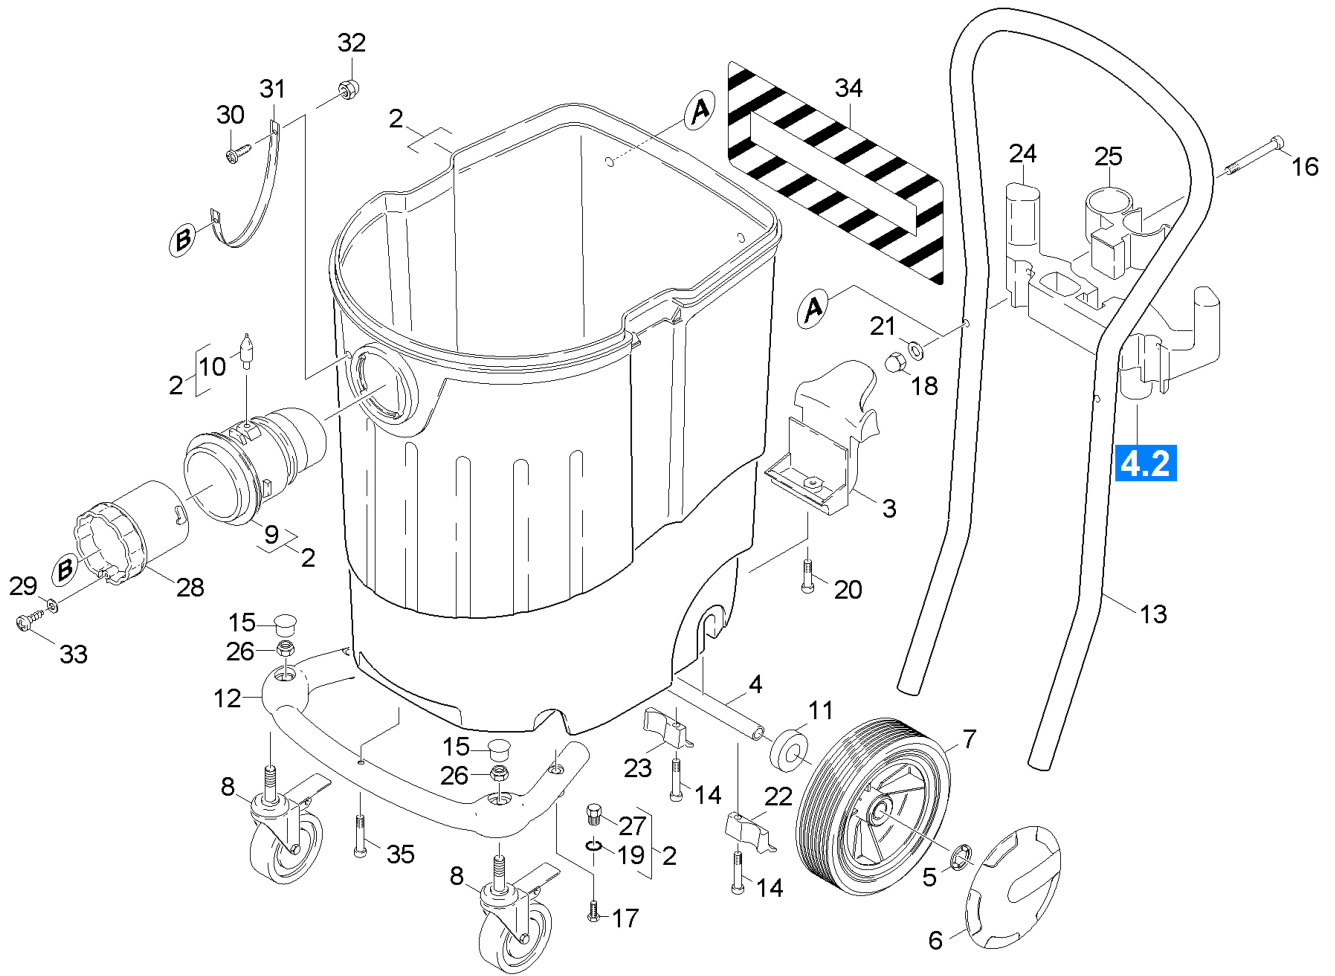

4 Starvac M55 Container

Item no.	Article no.	Description	Quantity
2	064165	Container Starvac M55	1
3	060924	Holding device floor nozzle Starvac	1
4	089219	Axle container Starvac M55	1
5	060930	Safety washer Starvac+PallmannDust	2
6	060942	Wheel cap Starvac/Dust	2
7	060941	Wheel Ø180 Starvac+Pallmann Dust	2
8	060943	Steering wheel with brake Ø75 Starvac	1
9	081672	Suction connection Starvac	1
10	081673	Bolt electrically conductive M55 M30	1
11		Spacer	2
12	065084	Steering roll bar Starvac M55	1
13		Shackle	1
14	060952	Screw 5x30 Starvac/Dust	2
15	080466	Nut Cover Starvac M55	2
16		Bolt	2
17	067888	Screw M8x40 Starvac M55	2
18		Cap nut	2
19	067889	Sealing ring 12x2 Starvac	2
20	060954	Screw 5x20 Starvac M55	1
21		Washer	2
22		Holding device, left	1
23		Holding device, right	1
24	064810	Holder Accessories Basic body Starvac	1
25	069225	Holder Accessories to plug Starvac M55	1
26	081266	Hexagon nut M10 Starvac M55	2
27	077225	Bushing M8 Starvac	2
28	060928	Hose coupling Starvac/Dust	1
29	060957	Washer 4-A2 M4 Starvac/Dust	1
30	060975	Screw M 4x 8-A2 Starvac/Dust	1
31	060921	Perforated tape Starvac/Dust	1
32	060956	Cap nut M4 Starvac/Dust	1
33	060953	Screw 4x12 Starvac/Dust	1
34		Label M	1
35	073358	Screw 5x25 Starvac	1


5 Starvac M55 Outlet hose

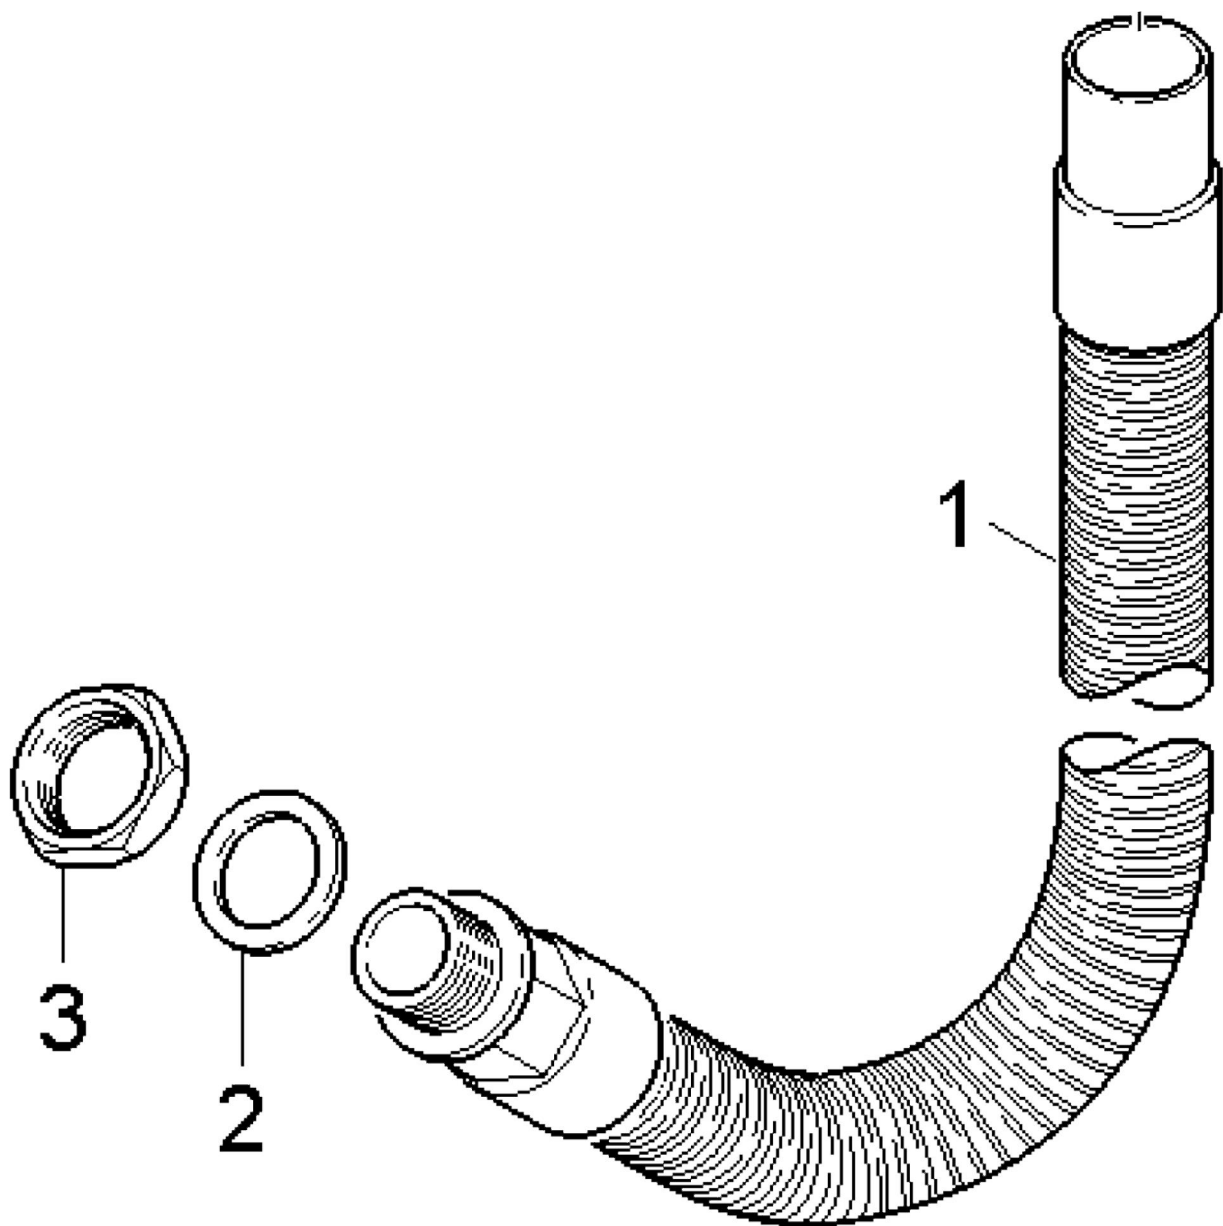

5 Starvac M55 Outlet hose

Item no.	Article no.	Description	Quantity
1	080157	Drain hose Starvac M55	1
2	087561	Sealing ring drain hose Starvac M55	1
3	087562	Hexagon nut Drain hose Starvac	1

6 Starvac M55 Accessories

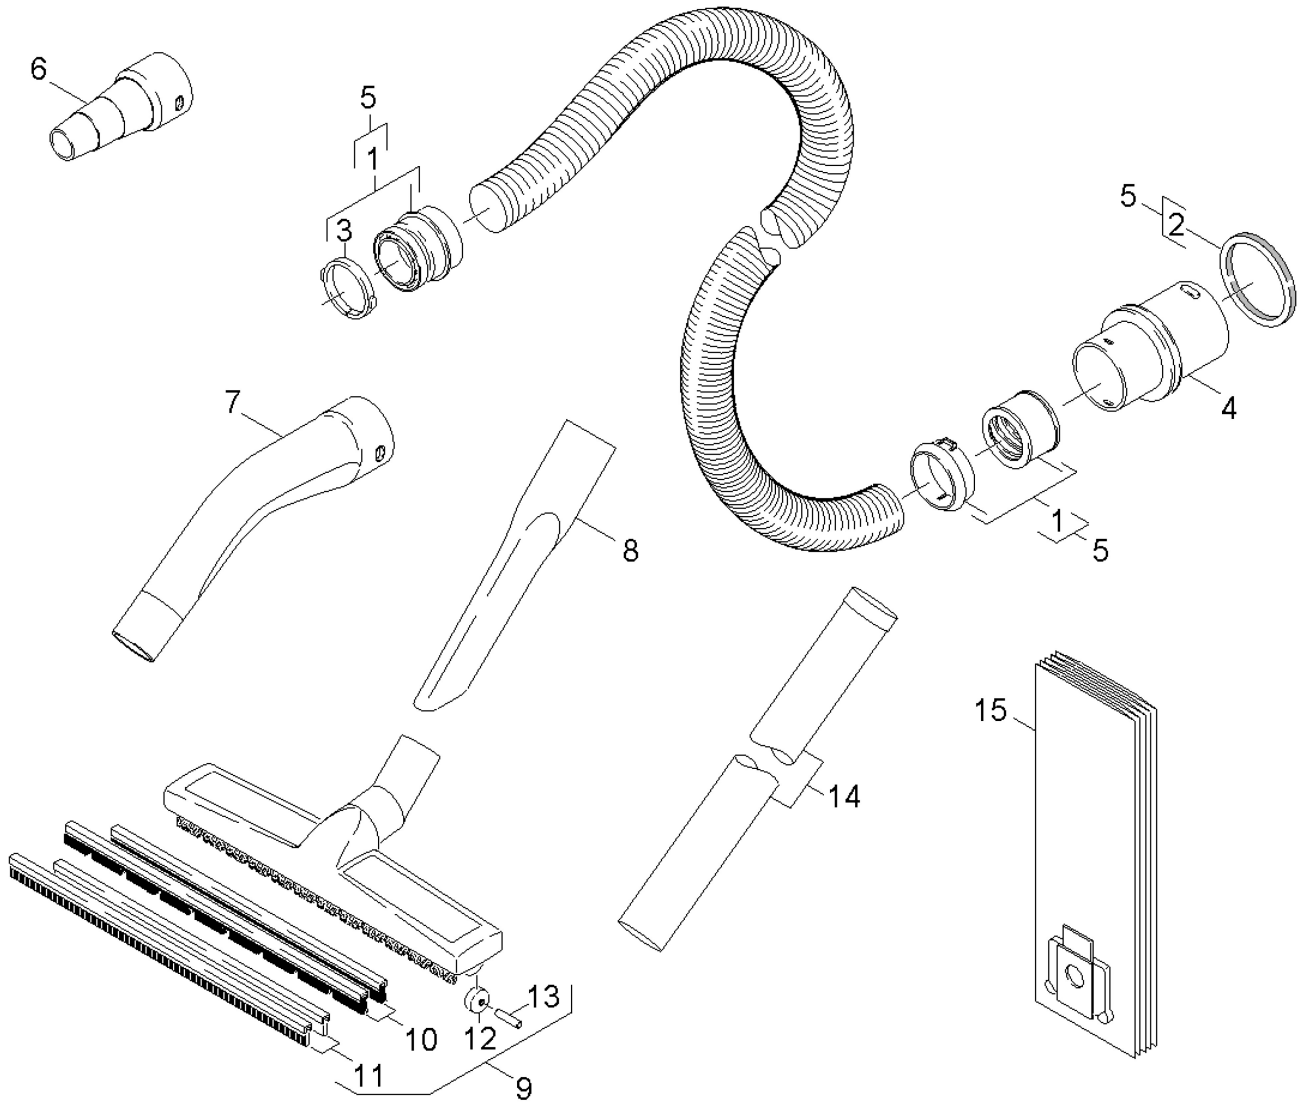


6 Starvac M55 Accessories

Item no.	Article no.	Description	Quantity
1	060919	Repair set Starvac/Pallmann Dust	1
2	060929	Sealing ring hose Starvac+Pallmann Dust	1
3	060922	Clamping ring Starvac+Pallmann Dust	1
4	073704	Hose connections Starvac	1
5	060951	Suction hose Starvac+Pallmann Dust kpl.	1
6	060926	Sleeve C35EL Starvac+PallmannDust	1
7	060923	Elbow Starvac+PallmannDust	1
8	060950	Joint nozzle DN35 Starvac	1
9	062162	Alu floor nozzle Starvac/Dust 370mm	1
9	060947	Plastic floor nozzle Starvac/Dust 230mm	1
10	060946	Brush set for floor nozzle Starvac 230mm	1
10	066745	Brush set for floor nozzle Starvac 370mm	1
11	060945	Rubber lips set floor nozzle Starvac 230	1
11	062165	Rubber lips set floor nozzle Starvac 370	1
12	083245	Wheel for floor nozzle Alu 370mm	2
13	082154	Castor+axle for floor nozzle 230mm	2
14	060944	Suction pipe DN35 Starvac SEE 16340	2
15	060948	Paper filter Starvac M55 / 5pcs/PU	1

1 Starvac M55 230V EU (01 / 2019 bis heute)

Item no.	Article no.	Description
1	02_11_060800	Floor Noozel Alu
1	02_01_060800	Starvac M55 Hood
2	02_02_060800	Starvac M55 Turbine 1
3	02_03_060800	Starvac M55 Turbine 2
4	02_04_060800	Housing Suction turbine
5	02_05_060800	Starvac M55 Filter vibrator
6	02_06_060800	Starvac M55 Valve
7	02_07_060800	Starvac M55 Container
8	01_05_060800	Starvac M55 Outlet hose
9	02_09_060800	Starvac M55 Accessories
10	02_10_060800	ABS Hose coupling


1 Starvac M55 Hood

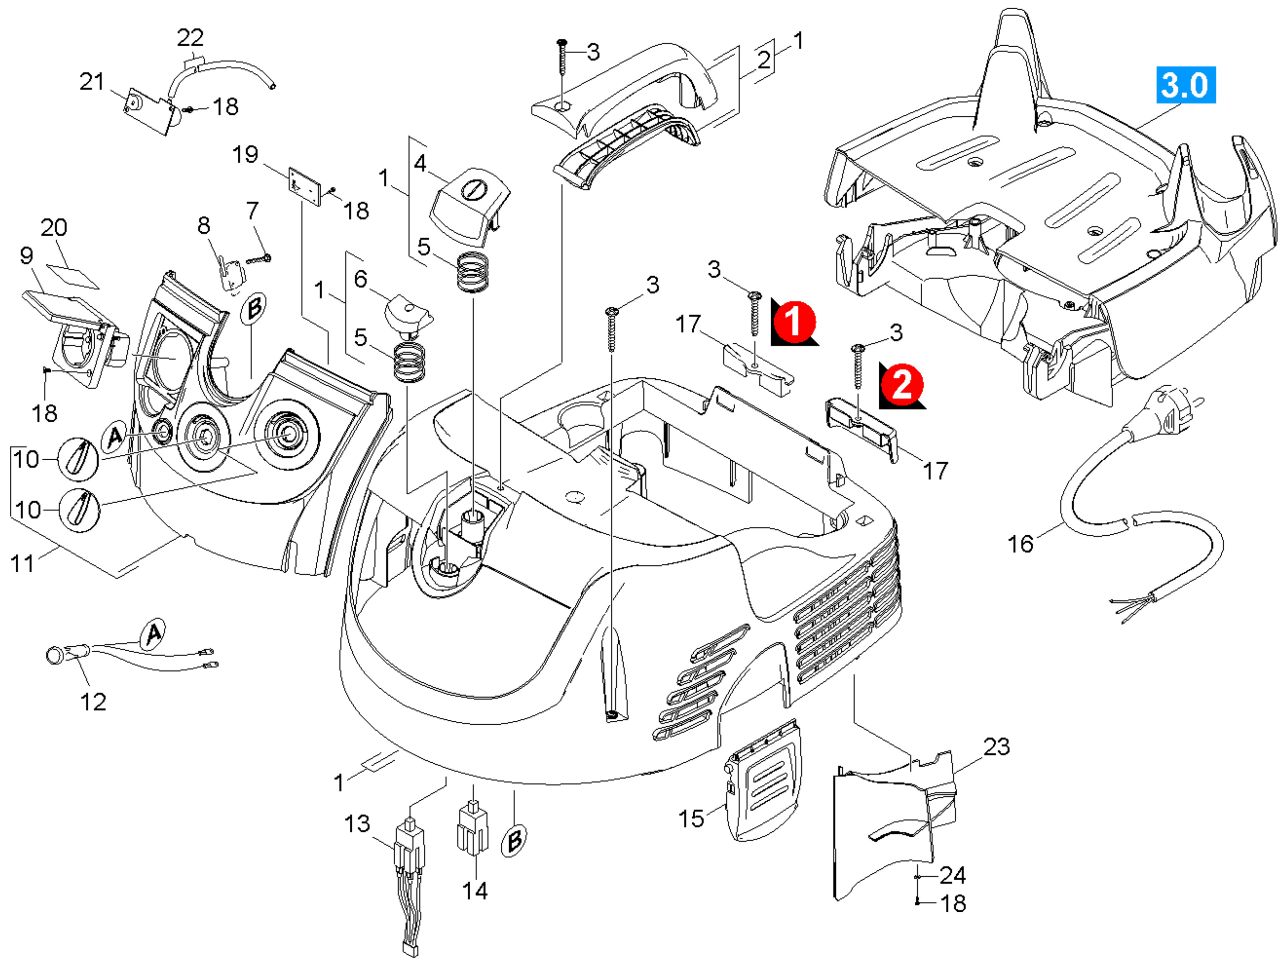

1 Starvac M55 Hood

Item no.	Article no.	Description	Quantity
2	060920	Handle cpl. Starvac+PallmannDust	1
3	060952	Screw 5x30 Starvac/Dust	5
3.0	070566	Hood complet Starvac M55	1
4	064166	Switch on/off calipers Starvac / Dust	1
5	070568	Spring push button Starvac	2
6	069799	Push button f. LED Starvac / Dust	1
7	060955	Screw 4x16 Starvac+PallmannDust	1
8	065773	Micro switch Starvac M55	1
9	072764	Installation socket Europa Starvac	1
9	062053	Installation socket CH Starvac	1
9	062052	Installation socket UK Starvac	1
10	073418	Knob Starvac+Dust	2
11		Instrument Panel Starvac M55	1
12	077224	Signal lamp green Starvac	1
13	064881	Switch with LED Starvac/Dust	1
14	064350	Electrical push button On/Off Starvac	1
15	060925	Closing flap Starvac/Dust	2
16	067390	Cord 3G1,5x10m green with plug	1
17		Cover for holder Accessories	1
18	169413	Screw Starvac 3x12 10.9	7
19	077006	Circuit board Starvac	1
20	169414	Label cutting Starvac	1
21		Circuit board hose selector switch	1
22		Hose Ø2 1,35x410mm	1
23		Moulded part Blow-out ribs	1
24		Washer	1


2 Starvac M55 Turbine 1

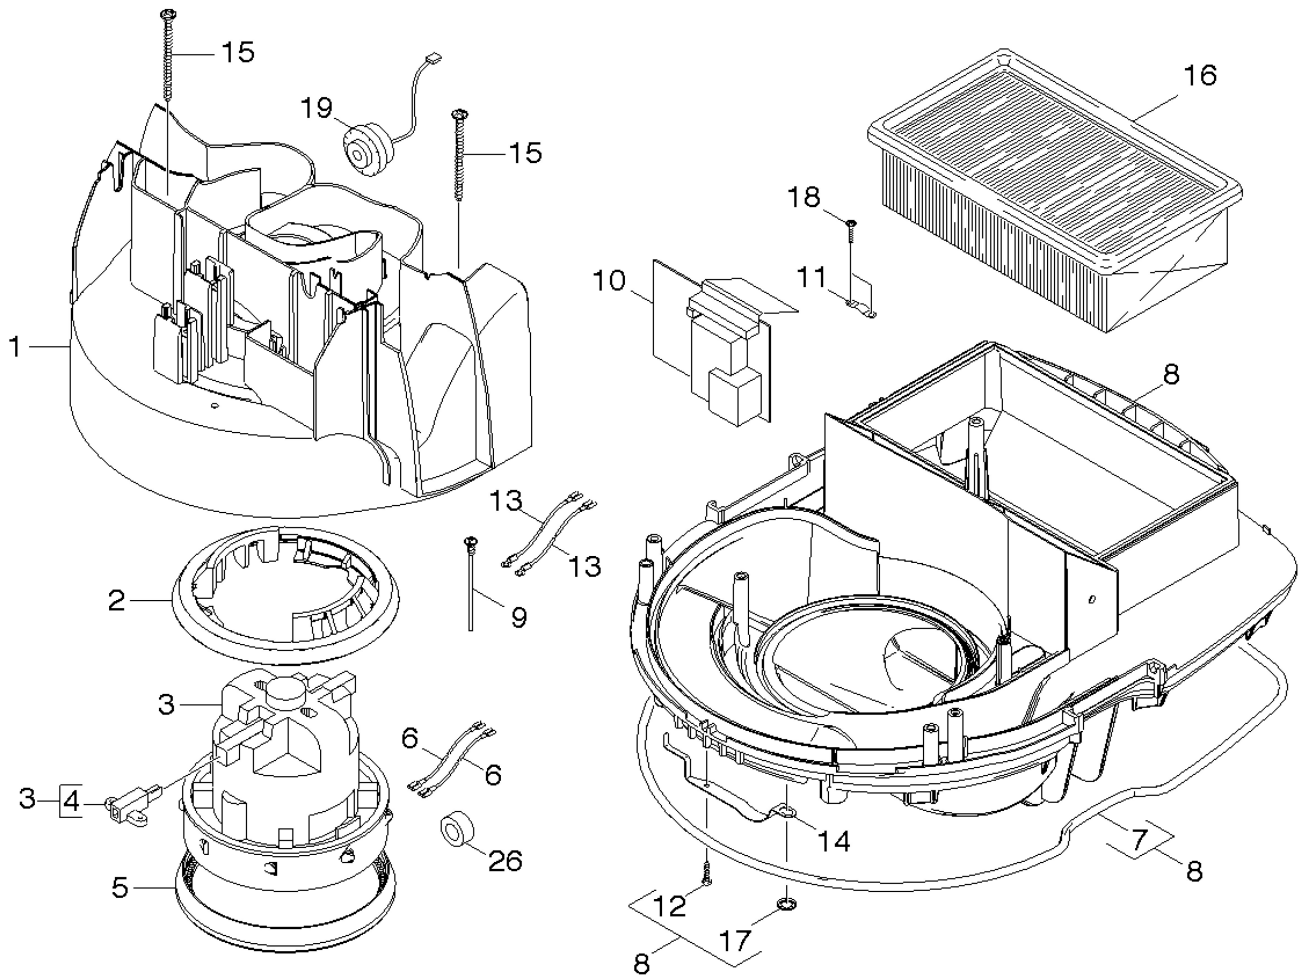

2 Starvac M55 Turbine 1

Item no.	Article no.	Description	Quantity
1	084471	Turbine housing Starvac M55	1
2	067335	Seal above suction turbine 230V Starvac	1
3	066488	suction turbine 230V Starvac up to 4/19	1
4	067331	Set carbon brushes Starvac/Dust	1
5	067334	Seal below suction turbine 230V Starvac	1
6		Cable for turbine	2
7	081836	Seal rubber turbine Starvac/Dust	1
8	082634	Housing complete Starvac	1
9		Sensor	2
10	072974	Turbine circuit board 230V Starvac 4/19	1
11		Gripper clamb	1
12		Bolt	1
13		Cable for Sensor light blue	2
14		Spring electrically conductive	1
15	060952	Screw 5x30 Starvac/Dust	2
16	060949	Flat-filter Starvac/Dust	1
17		Mounting	1
18		Bolt	2
19		Acoustic filter warning	1
26	088627	Ferrit ring M30 / M55	1






3 Starvac M55 Turbine 2

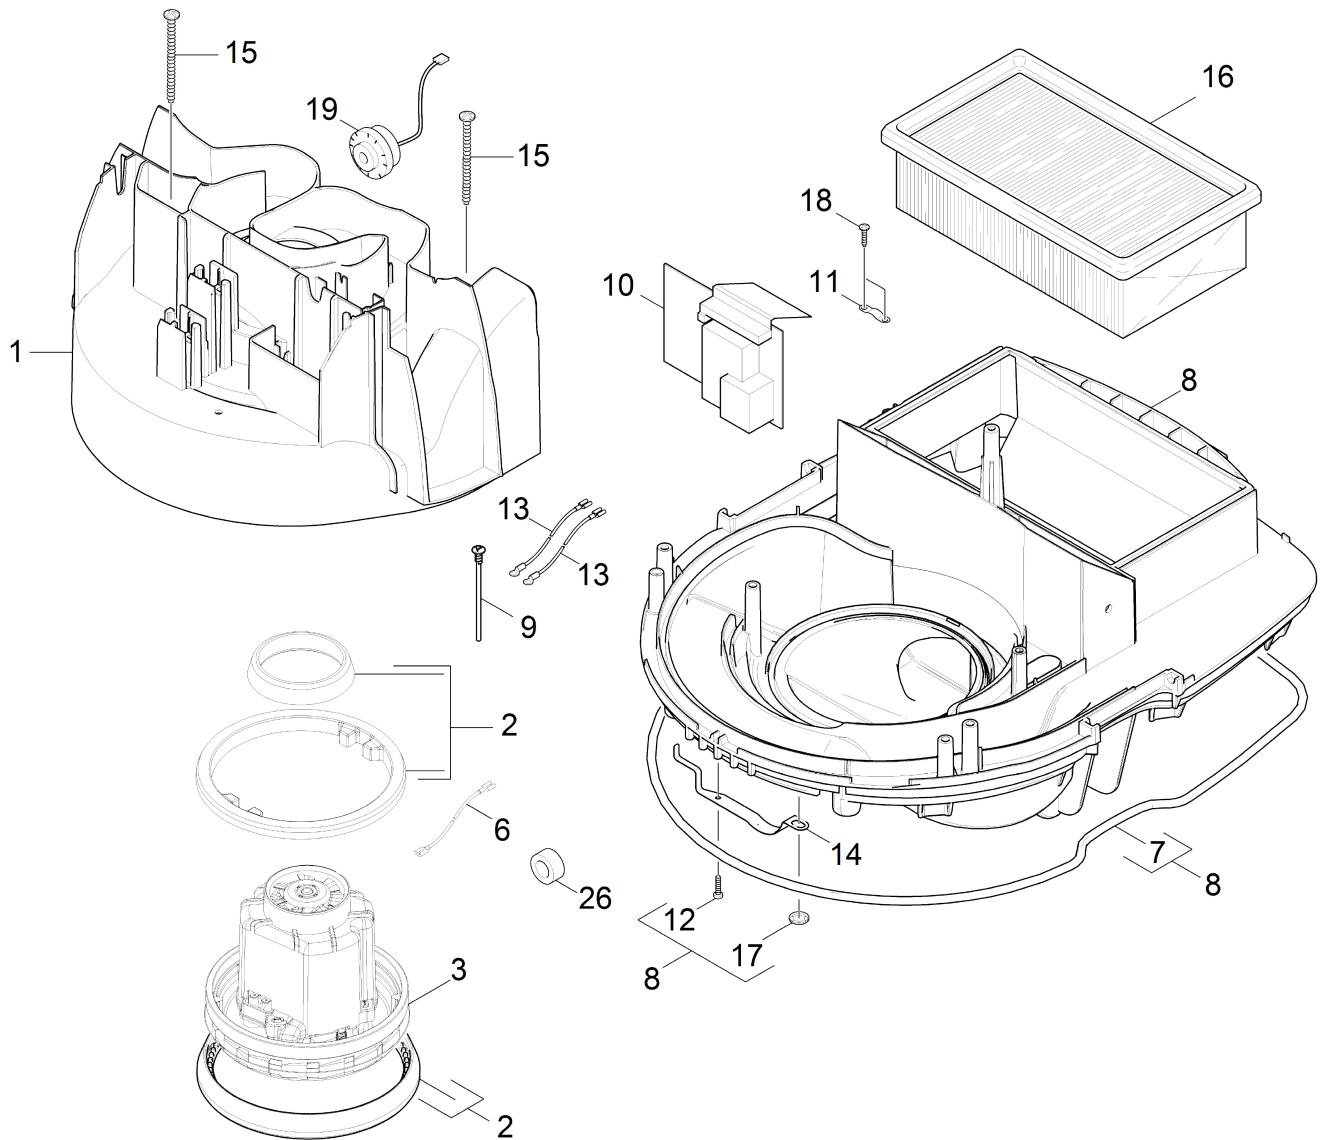

3 Starvac M55 Turbine 2

Item no.	Article no.	Description	Quantity
1		Housing Suction turbine Upper part	1
2		Set Gasket Replacement	1
3	012231	Suction turbine 230V Starvac from 5/2019	1
6		Cable for turbine	1
7	081836	Seal rubber turbine Starvac/Dust	1
8		Housing Suction turbine lower part	1
9		Sensor	1
10	012232	Turbine circuit board 230V Starvac 5/19	1
11		Gripper clamb	1
12		Bolt	1
13		Cable for Sensor light blue	2
14		Spring electrically conductive	1
15	060952	Screw 5x30 Starvac/Dust	2
16		Flat filters	1
17		Mounting	1
18		Bolt	2
19		Acoustic filter warning	1
26	088627	Ferrit ring M30 / M55	1

  
4 Housing Suction turbine

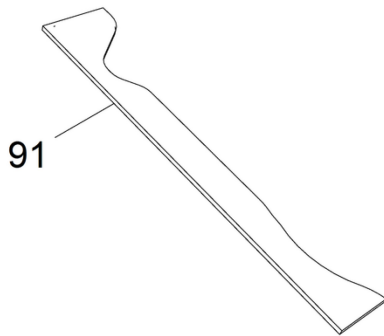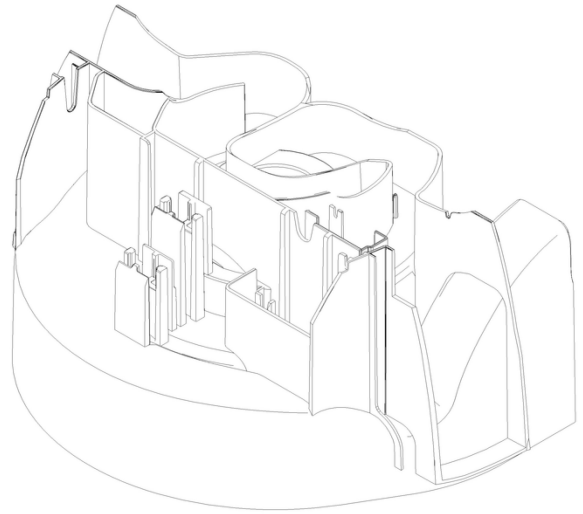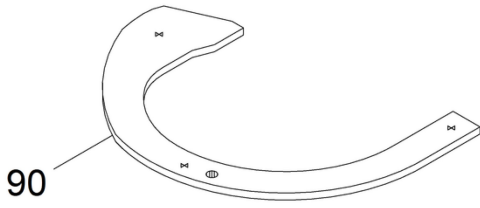

4 Housing Suction turbine

Item no.	Description	Quantity
90	Insulating mat Housing Suction turbine 1	1
91	Insulating mat Housing Suction turbine 2	1
206	Lock washer	3


5 Starvac M55 Filter vibrator

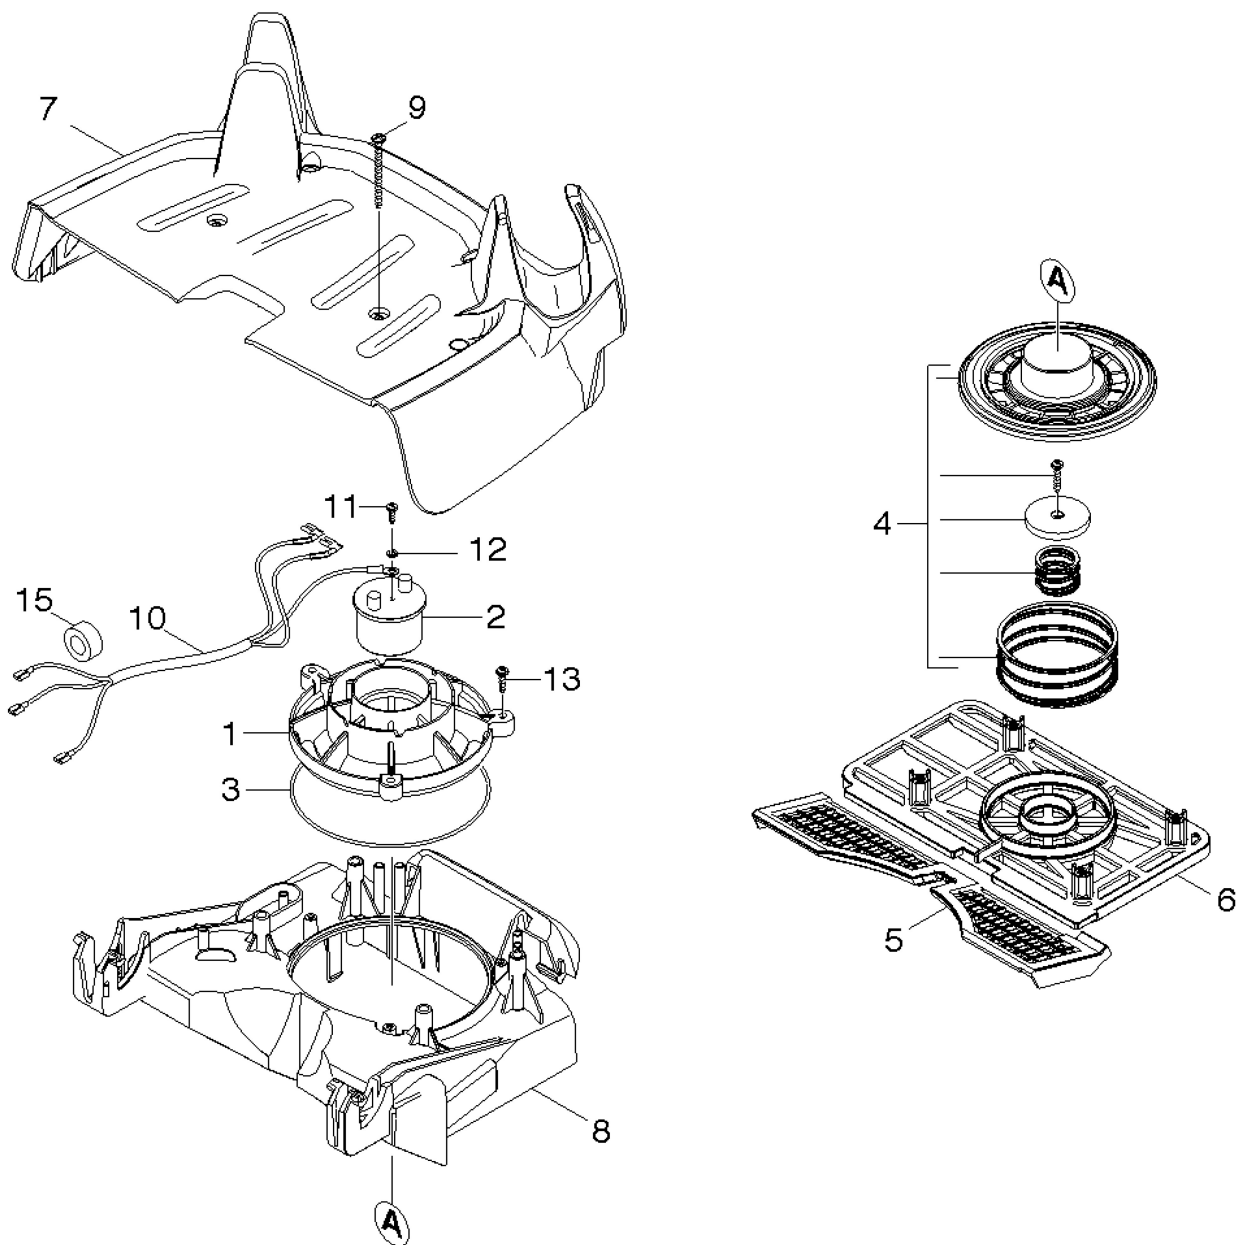

5 Starvac M55 Filter vibrator

Item no.	Article no.	Description	Quantity
1		Holder Magnet 2019	1
2	074336	Magnet 230V Starvac	1
3	077108	O-Ring 115,0x1,78-NBR 70 Starvac	1
4	077109	Replacement Set valve cpl. Starvac	1
5	073270	Sealing Supply air Starvac	1
6	081978	Holder spring Starvac M55	1
7		Cover for Filter cover 2019	1
8		Filter cover 2019	1
9	069534	Screw 5x80 Starvac/Dust	4
10	088623	Cable for magnet 230V Starvac M55	1
11	088624	Screw M4x8 Starvac M55	1
12	088625	Serrated lock washer A4 Starvac M55	1
13	088626	Screw M4x12 Starvac M55	3
15	088627	Ferrit ring M30 / M55	1


6 Starvac M55 Valve

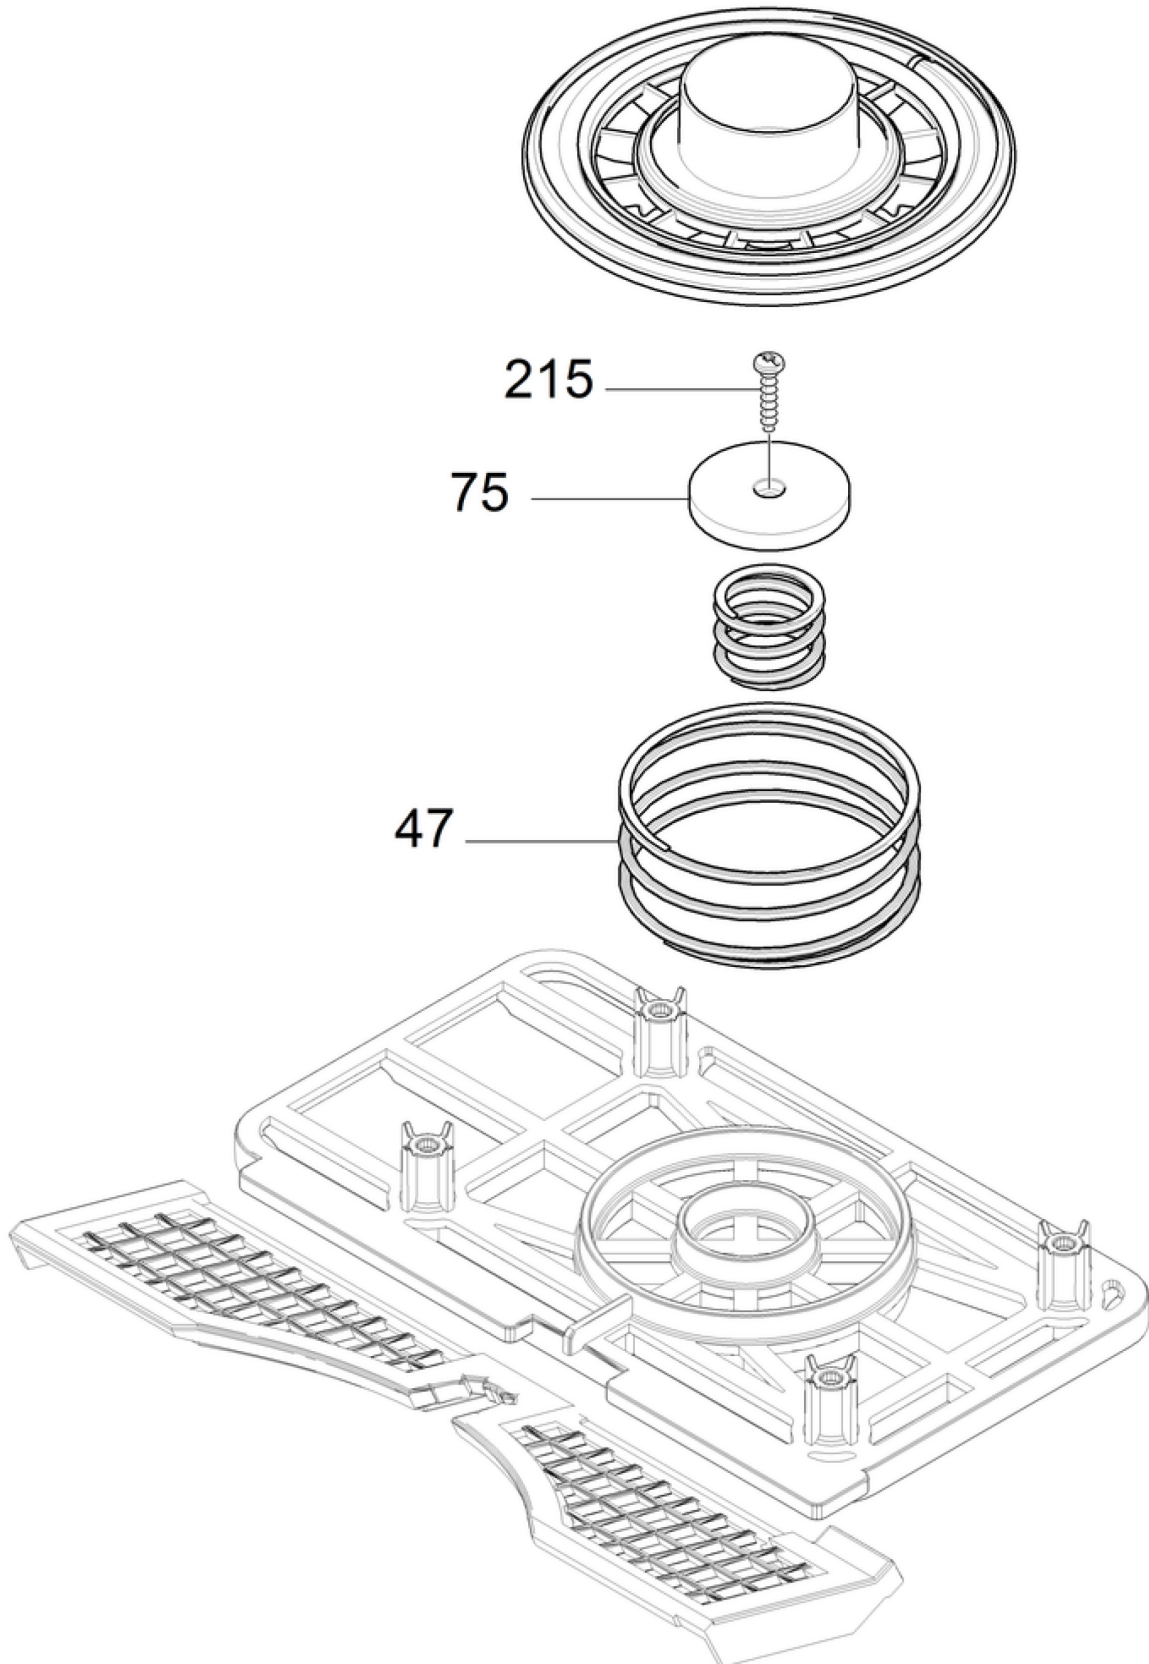

6 Starvac M55 Valve

Item no.	Description	Quantity
47	Spring soft	1
75	Valve disc	1
215	Oval-head screw with hexagon socket head	1


7 Starvac M55 Container

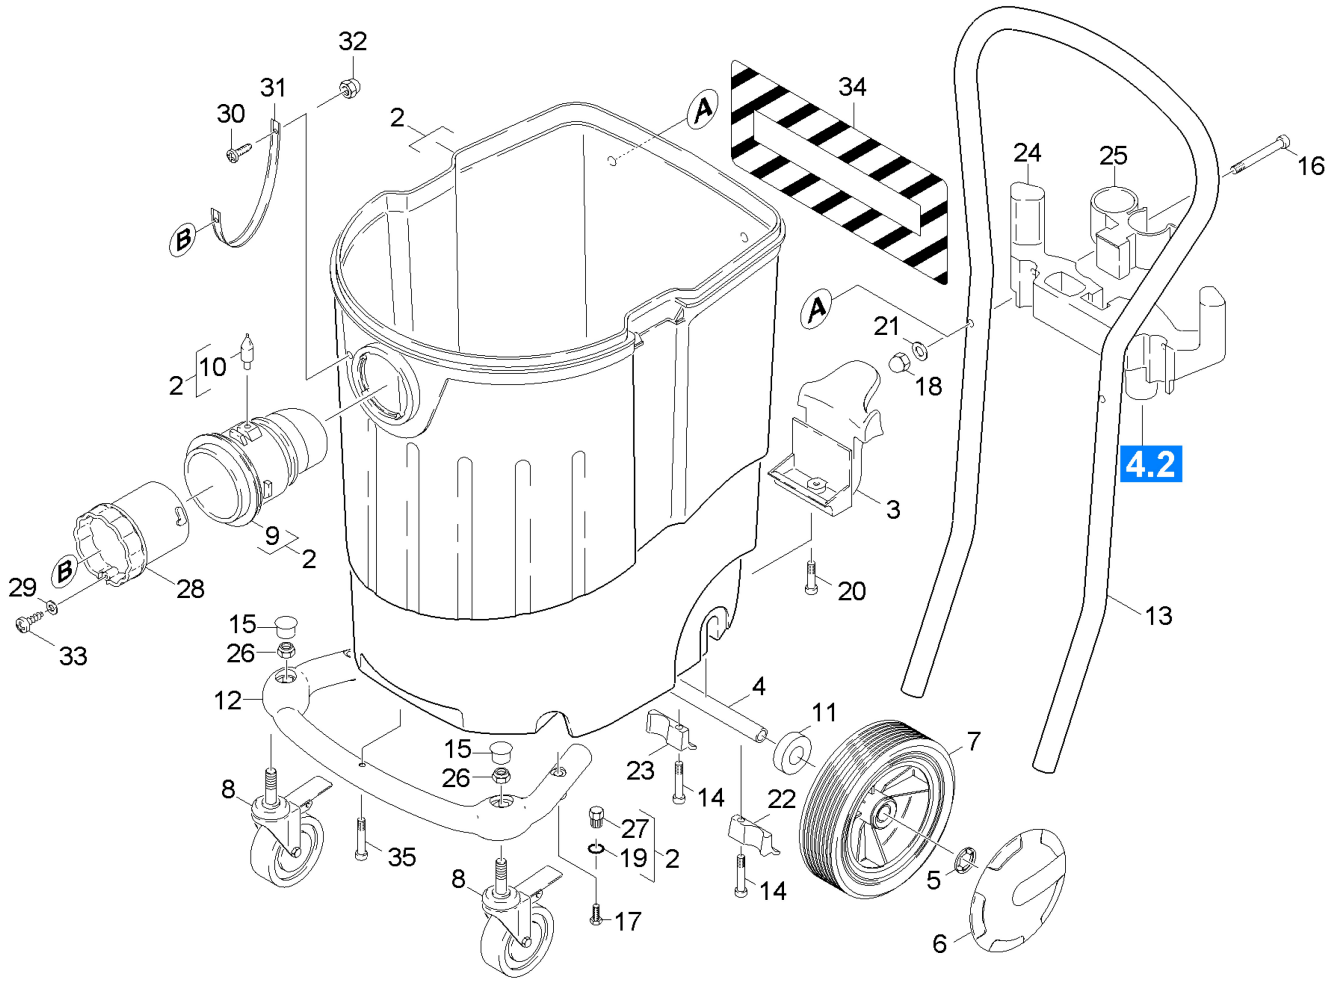

7 Starvac M55 Container

Item no.	Article no.	Description	Quantity
2	064165	Container Starvac M55	1
3	060924	Holding device floor nozzle Starvac	1
4	089219	Axle container Starvac M55	1
5	060930	Safety washer Starvac+PallmannDust	2
6	060942	Wheel cap Starvac/Dust	2
7	060941	Wheel Ø180 Starvac+Pallmann Dust	2
8	060943	Steering wheel with brake Ø75 Starvac	1
9	081672	Suction connection Starvac	1
10	081673	Bolt electrically conductive M55 M30	1
11		Distance bush	2
12	065084	Steering roll bar Starvac M55	1
13		Rear push bar	1
14	060952	Screw 5x30 Starvac/Dust	2
15	080466	Nut Cover Starvac M55	2
16		Screw	2
17	067888	Screw M8x40 Starvac M55	2
18		Cap nut	2
19	067889	Sealing ring 12x2 Starvac	2
20	060954	Screw 5x20 Starvac M55	1
21		Washer	2
22		Holder left	1
23		Holder right	1
24	064810	Holder Accessories Basic body Starvac	1
25	069225	Holder Accessories to plug Starvac M55	1
26	081266	Hexagon nut M10 Starvac M55	2
27	077225	Bushing M8 Starvac	2
28	060928	Hose coupling Starvac/Dust	1
29	060957	Washer 4-A2 M4 Starvac/Dust	1
30	060975	Screw M 4x 8-A2 Starvac/Dust	1
31	060921	Perforated tape Starvac/Dust	1
32	060956	Cap nut M4 Starvac/Dust	1
33	060953	Screw 4x12 Starvac/Dust	1
34		Filter identification M	1
35	073358	Screw 5x25 Starvac	1


8 Starvac M55 Outlet hose

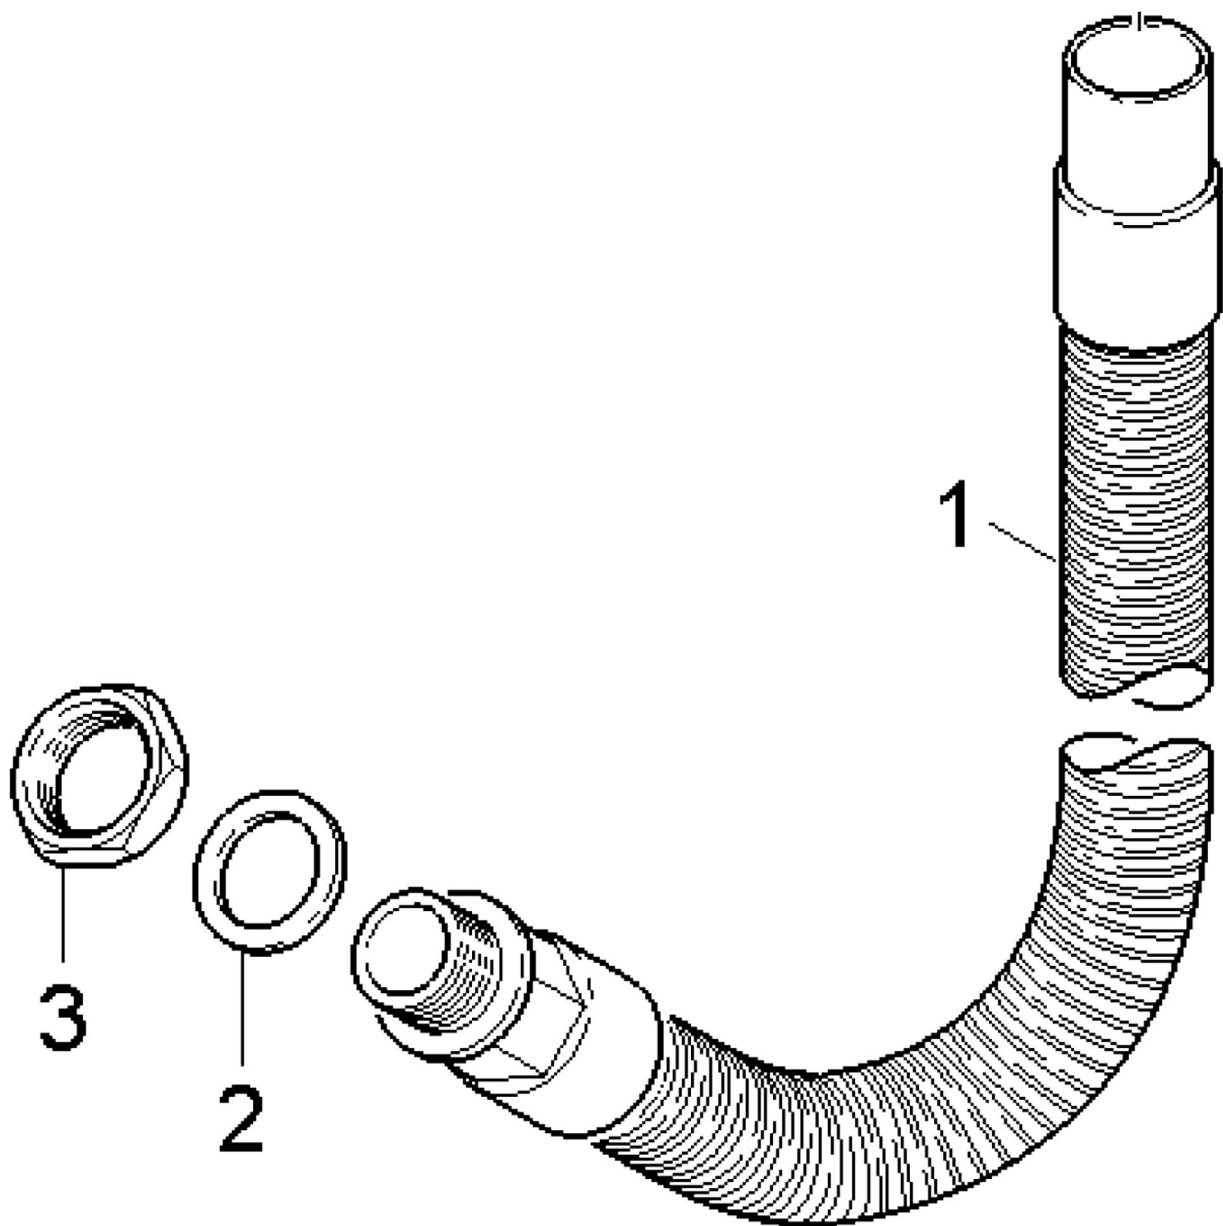

8 Starvac M55 Outlet hose

Item no.	Article no.	Description	Quantity
1	080157	Drain hose Starvac M55	1
2	087561	Sealing ring drain hose Starvac M55	1
3	087562	Hexagon nut Drain hose Starvac	1


9 Starvac M55 Accessories

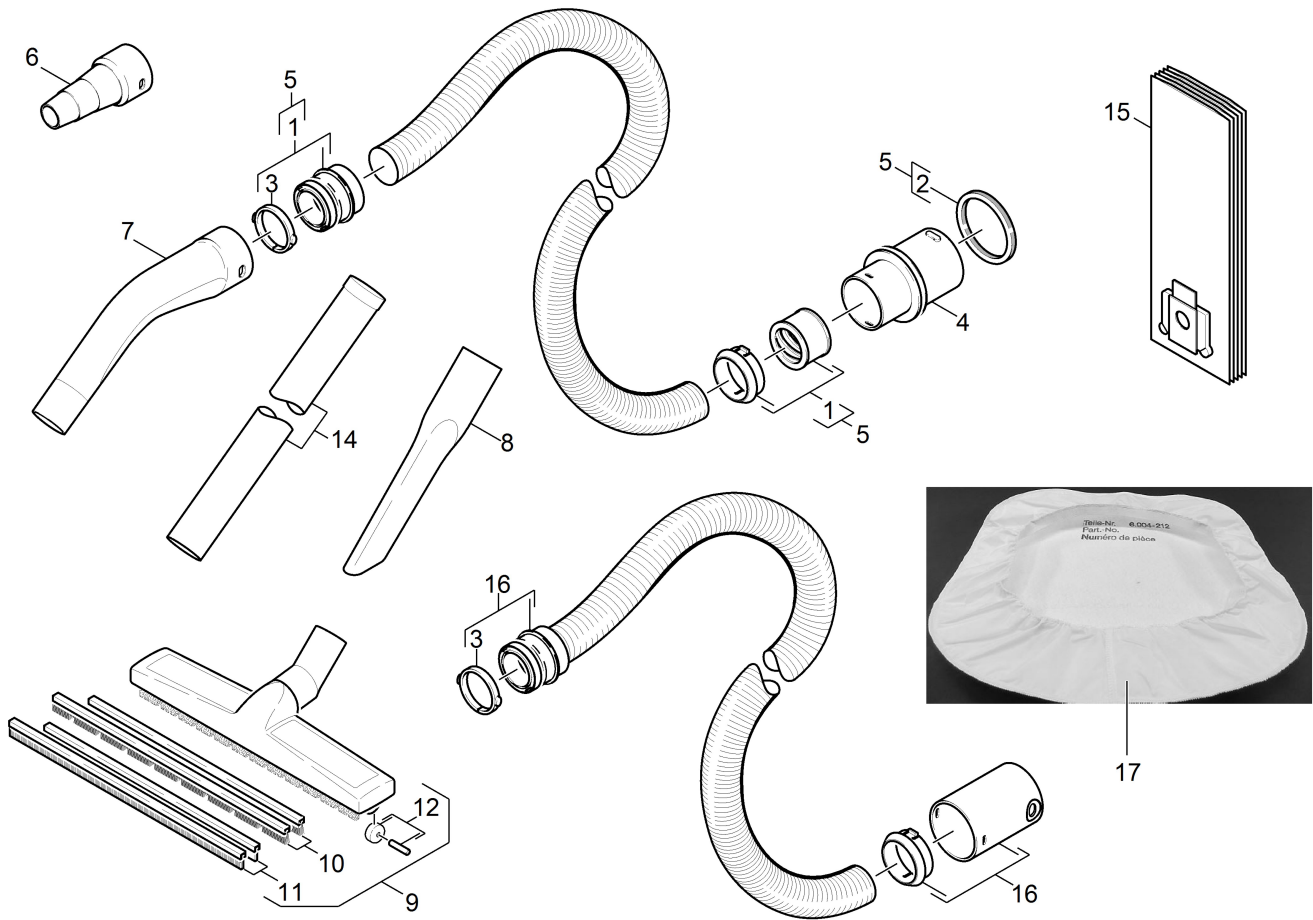

9 Starvac M55 Accessories

Item no.	Article no.	Description	Quantity
1	060919	Repair set Starvac/Pallmann Dust	1
2	060929	Sealing ring hose Starvac+Pallmann Dust	1
3	060922	Clamping ring Starvac+Pallmann Dust	1
4	073704	Hose connections Starvac	1
5	060951	Suction hose Starvac+Pallmann Dust kpl.	1
6	060926	Sleeve C35EL Starvac+PallmannDust	1
7	060923	Elbow Starvac+PallmannDust	1
8	060950	Joint nozzle DN35 Starvac	1
9	060947	Plastic floor nozzle Starvac/Dust 230mm	1
9	062162	Alu floor nozzle Starvac/Dust 370mm	1
10	060946	Brush set for floor nozzle Starvac 230mm	1
10	066745	Brush set for floor nozzle Starvac 370mm	1
11	060945	Rubber lips set floor nozzle Starvac 230	1
11	062165	Rubber lips set floor nozzle Starvac 370	1
12	082154	Castor+axle for floor nozzle 230mm	2
14	060944	Suction pipe DN35 Starvac SEE 16340	2
15	060948	Paper filter Starvac M55 / 5pcs/PU	1
16	063936	Extension hose 4m Starvac/Dust	1
17	062562	Membrane filter Starvac+Pallmann Dust	1


10 ABS Hose coupling

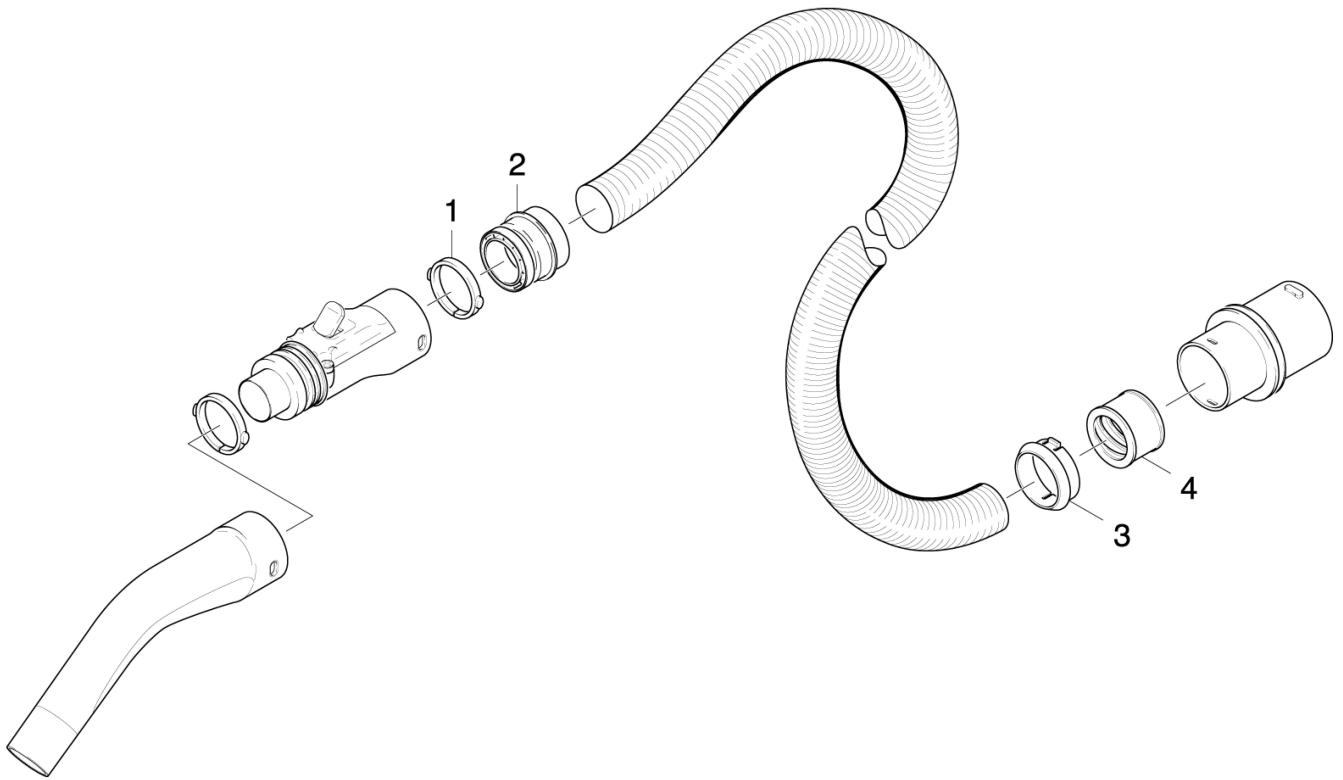

10 ABS Hose coupling

Item no.	Article no.	Description	Quantity
1	060922	Clamping ring Starvac+Pallmann Dust	1
2		Thread ring	1
3	064101	Clamping sleeve Starvac/Dust	1
4	064102	Thread-ring Starvac/Dust	1

1 Floor Noozel Alu

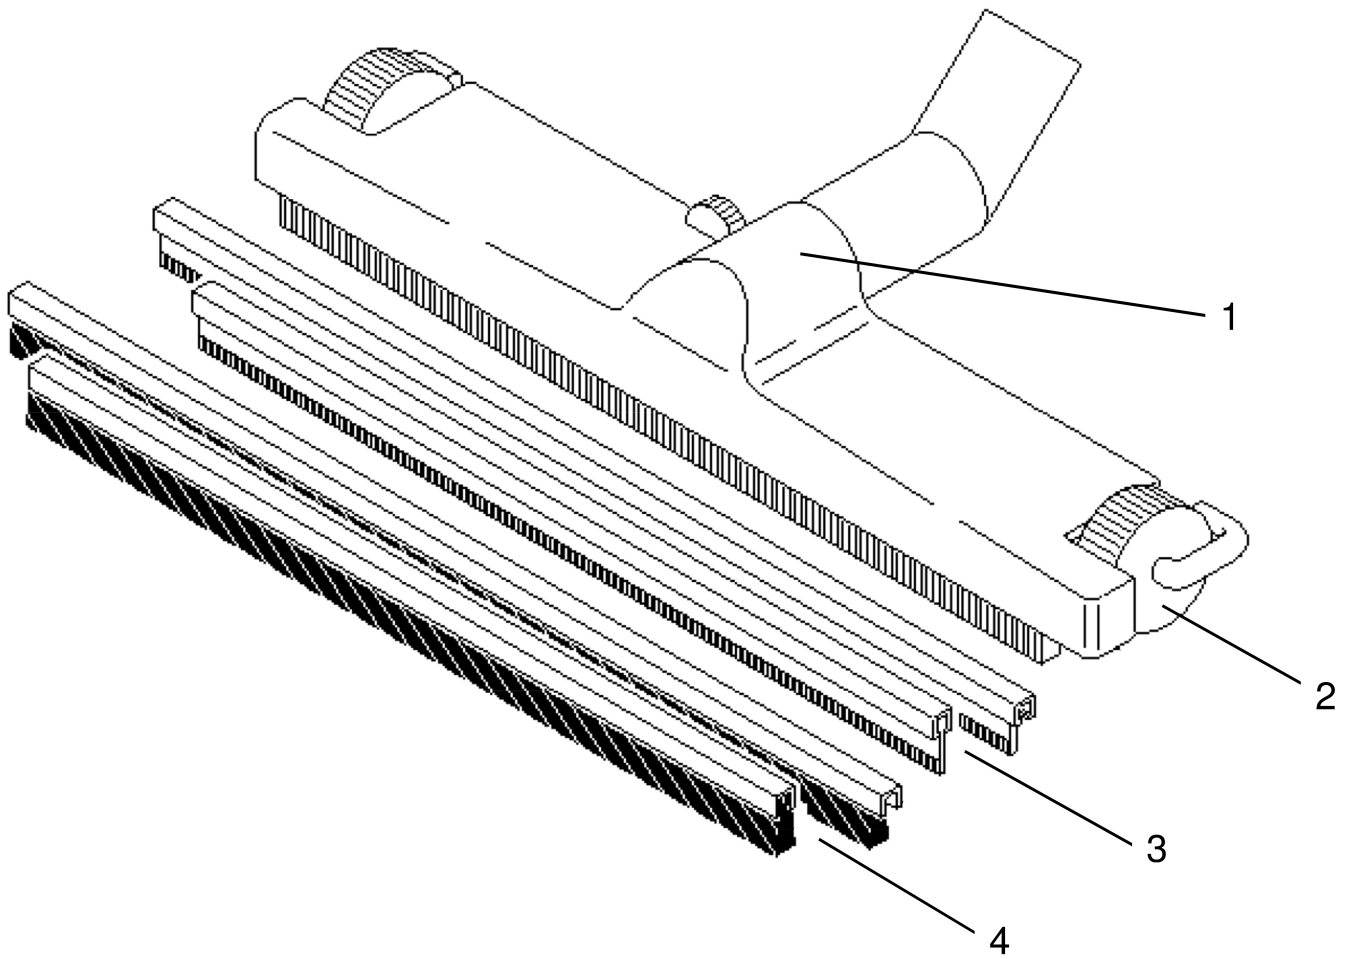

1 Floor Noozel Alu

Item no.	Article no.	Description	Quantity
1	062162	Alu floor nozzle Starvac/Dust 370mm	1
2	083245	Wheel for floor nozzle Alu 370mm	2
3	062165	Rubber lips set floor nozzle Starvac 370	1
4	066745	Brush set for floor nozzle Starvac 370mm	1